
The shortcut button gives you direct access to Browse mode and My Settings on the player's touch display.

Three-position lever

Simply tap the three-position lever to engage Slip Reverse, Forward, and Reverse.

Memory Cue

Set, name and colour-code your cues in rekordbox, for example 'my breakdown', then access the information directly on the player's screen.

My Settings

Take your preferred settings with you wherever you play. Save your settings and tracks to USB, SD card, smartphone or tablet, connect to the hardware, and your settings load instantly along with your tracks.

Beat Jump

Use Quantized Beat Jump to jump 1 beat backwards or forwards from the current playback position.

The CDJ-2000NXS2 Box Includes:(1) Pioneer DJ CDJ-2000NXS2 Pro-DJ Multi Player

- (1) Audio Cable
- (1) iPod Cable
- (1) LAN Cable
- (1) Warranty card
- (1) Disc force eject pin (mounted on bottom of product)
- (1) Resource CD-ROM
- (1) Power Cord
- (1) Quick Start